

## Seal Unit

All runner blocks are delivered with greased seal units. The basic material is POM.

Instructions for the replacement:


- Pull exchanged seal unit up.
- Insert the new seal unit.
- Push the runner block back on the guide rail.
- Align the seal unit vertically to the guide rail.

Note! Assembly with mounted carriage is not possible.

Dimensions in mm.



## Dimensions

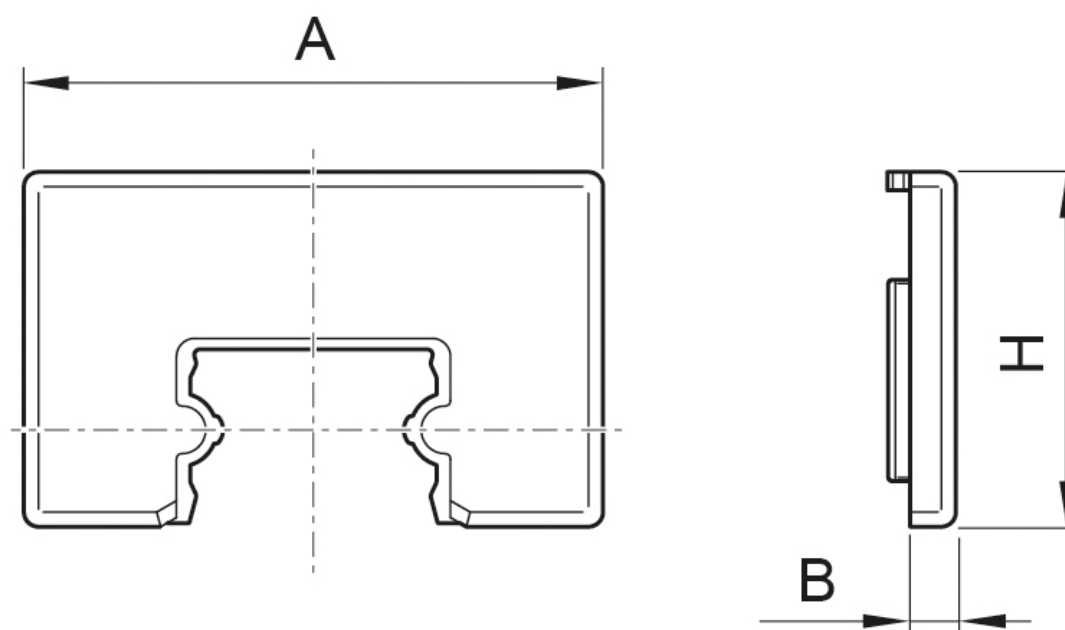

Designation	A	B	H
<b>nVA15</b>	31.7	2.5	19.4
<b>nVA20</b>	43.2	2.8	24.3
<b>nVA25</b>	47.2	3	26.3