Seal Unit

All runner blocks are delivered with greased seal units. The basic material is POM.




Instructions for the replacement:
- Pull exchanged seal unit up.
- Insert the new seal unit.
- Push the runner block back on the guide rail.
- Align the seal unit vertically to the guide rail.

Note! Assembly with mounted carriage is not possible.

Dimensions in mm.

Every care has been taken to ensure the accuracy of the information in this document, but we take no liability for any errors or omissions. We reserve the right to make changes without prior notice.

Dimensions

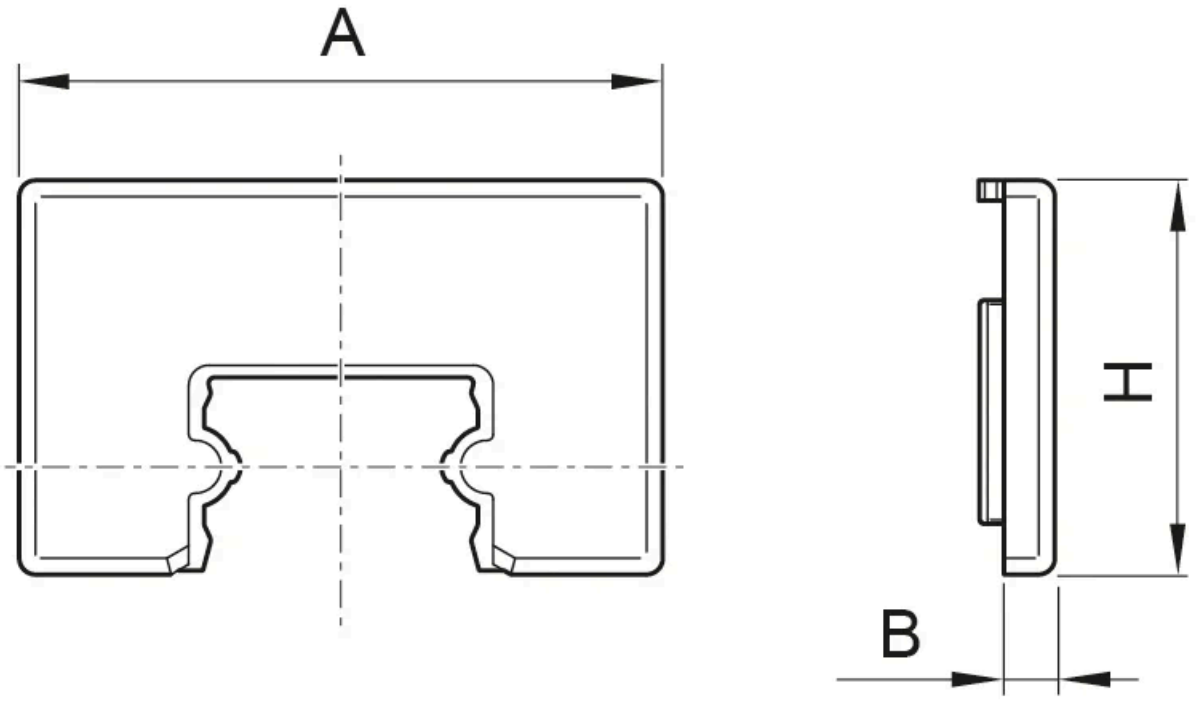

Designation	A	B	H
nVA15	31.7	2.5	19.4
nVA20	43.2	2.8	24.3
nVA25	47.2	3	26.3

Every care has been taken to ensure the accuracy of the information in this document, but we take no liability for any errors or omissions. We reserve the right to make changes without prior notice.